

PANEL GUIDE

Honeywell Notifier – RS232

Updated March 26, 2025

Latest information

<https://www.csl-group.com/panel-guides/honeywell/honeywell-notifier-rs232/>

Panel Connection – RS232

Manufacturer	Honeywell
Model	Notifier
Version	ID2000
Cable Required?	Unterminated serial cable with 9 Way D-Type IDC socket.
Panel Profile	NOTIFIER-PRINTER-RS232
Panel Connection	RS232
Technical Notes	ID3000 is not supported. If an EN54-compliant installation is required, please also follow the instructions in the DualCom Pro 2 Fire EN54 Variant Quick Guide.

Panel Connection Information

RS232-T	9 Way D-Type Pin 2
RS232-R	9 Way D-Type Pin 3
RTN	9 Way D-Type Pin 5

Panel Setup

Navigate to the RS232 Port.

Set type to 3rd Party Device.

Set Baud rate to 9600.

Note:

To comply to EN54 standards, the instructions in [CSL DualCom Pro 2 Fire EN54 Variant Quick Guide](https://www.csl-group.com/support/) (<https://www.csl-group.com/support/>) must also be followed.

The non-isolated DB9 printer port should be used for connecting to the DualCom Pro.