

PANEL GUIDE

Pyronix Euro, Enforcer and CPX – Dial Capture

Updated March 26, 2025

Latest information

<https://www.csl-group.com/panel-guides/pyronix/euro-enforcer-cpx/>

Panel Connection – Dial Capture

Manufacturer	Pyronix
Model	Euro/Enforcer/PCX
Version	Pro 1 Min V2.33 Pro 2 Min V2.07
Minimum DualCom Pro Firmware	DualCom Pro: V2.33 DualCom Pro 2: V2.1.0
Minimum Panel Firmware	V5.1
Cable required?	N/A
Panel Profile	PYRONIX-EURO-ENFORCER-MCM
Panel Bus Connection	MCM Min V 2.05
Technical Notes	For UDL the CSL Remote Manger needs to be V1.6.3.0 or greater.

Panel Connection Information

Panel	DualCom Pro
PSTN A	DualCom Pro 1 – MCM plug-on module – Line A DualCom Pro 2 – DI

PSTN B	DualCom Pro 1 – MCM plug-on module – Line B DualCom Pro 2 – AL
--------	---

Panel Programming

- Go to Engineering Mode
- Go to programme **Digi/SMS call**
- Select Disable Digi/SMS <0>
- Select ARC Details <1>
- Select Active
- Select **format SIA (Option 129)**
- Select first number <01666111>
- Select second number <01666222>
- Select valid areas (select areas to be reported)
- Select stop on success (yes)
- Select ARC account
- Select content 1-16 (recommend 1-5, & 7-13)
- Select content 17-32 (recommend 21-25, 27-30, & 32)
- Select redials <03>
- Select time out <15>
- Select test calls (No)

Remote Access Programming

- Enter engineer mode and press **NO** till “**SET UP DOWNLOADING?**” is displayed, press **YES**.
- **Download by (None (0))** is displayed, press 1, **Download by Modem (1)** is now displayed, press **YES**.
- **Security Mode (Auto Answer (0))** is displayed, this is correct. Press **YES**.
- **Telecom Line (Dedicated (0))** is displayed, this is correct. Press **YES**.
- **Number of Rings to Prime (01)** is displayed, this part is irrelevant so can be left at factory default. Press **YES**.
- **Modem Speed (High (1))** is now displayed, this is correct. Press **YES**.
- **ARM PC telephone number 123456**
- Continue pressing **YES** until **Programme PC's** is displayed, press yes, PC1 is now displayed, enter
- Panel programming is now complete, **come out of engineer menu to save changes**

Hints & Tips

To stop the panel reporting Linefault to the Keypad: **Engineer mode > System Timings > Set Linefault to 250**