


UDL Setup for Texecom using new Remote Manager once installed


1. Login to My Base and the select the site you wish to connect to
2. Click on start UDL, the below details will be displayed

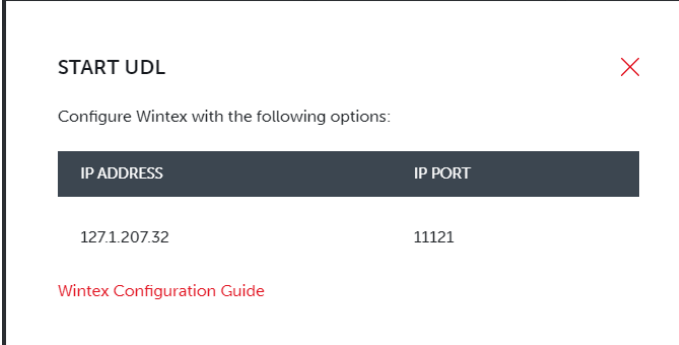

IP ADDRESS	IP PORT
127.1.207.32	11121

[Wintex Configuration Guide](#)

3. Open Wintex and Select new site, transfer the IP and Port number details into Wintex as below. Save as normal, ensuring you have selected the correct panel type and UDL password if used.

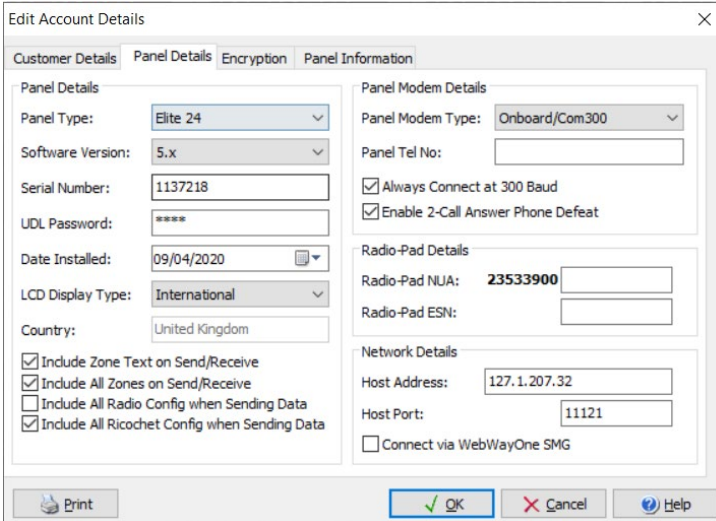

4. Press OK, then dial site via network and IP entered in previous steps obtained from My Base
5. Check in the bottom left hand corner, you should see online ready