


Emizon TCD Quick Start Guide for IP/GPRS

Scan the QR Code for Emizon Downloads and Online Support



RS232/RS485 Data Ports
For serial interface to panel / Remote maintenance /UDL

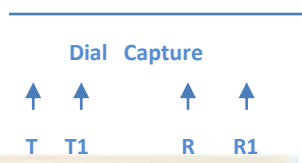

LED Status Display
For step-by-step installation & diagnostics i.e. signal strength and connection

Power LED 101


TCD Serial Number
XX-XXXXXX-XX

MAC Address
Found on underside of box
XX:XX:XX:XX:XX:XX

'One-Touch' Mode & Set Buttons
To access to the latest Firmware.
For Signal Strength Tap Mode button SW402 once.

Ethernet Activity LED 301

Ethernet Connector
To upgrade to broadband/IP when Networks available

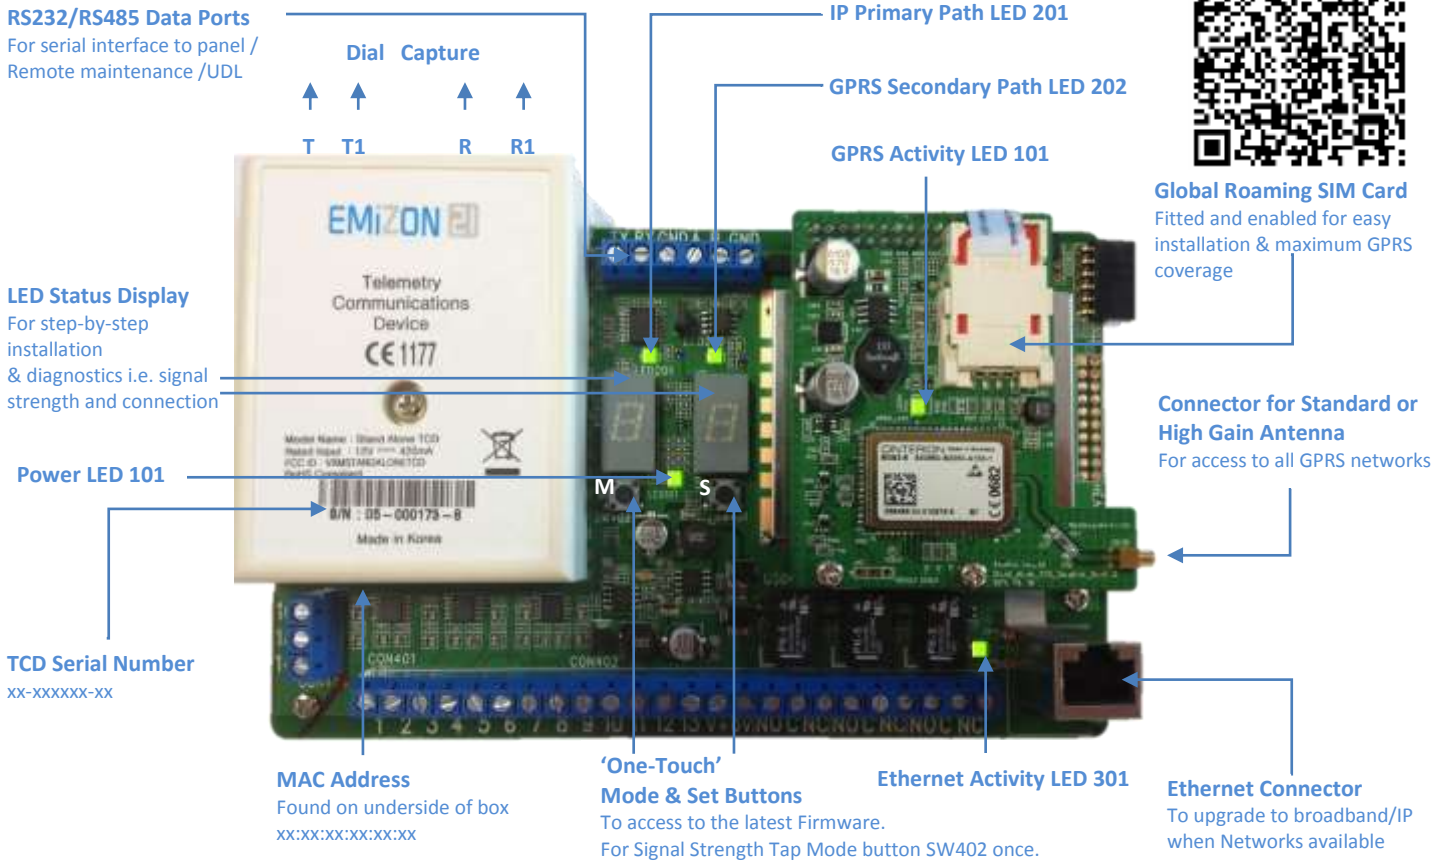

Global Roaming SIM Card
Fitted and enabled for easy installation & maximum GPRS coverage

Connector for Standard or High Gain Antenna
For access to all GPRS networks

NOTE: PUT THE TCD ON TEST WITH THE ARC BEFORE STEP 1

Step	Instruction	Display	Look out For
1. Fit TCD in Panel	Connect Antenna, Inputs, Relays and Power. Connect the network cable from TCD to Router or Ethernet port.	No change	Check with diagram above
2. Boot Up	Power-up the TCD, wait 30 Sec or until t 1 appears on the segment display.	B U B C T 1	GPRS PCB LED 101 flashing changes from once a second to once every 3 seconds.
3. Firmware check	Check for latest firmware by pressing Mode and Set buttons together for 10 seconds to establish an IP connection to the Emizon firmware server.	U F r r	UF 99 then rr indicates a firmware update in progress. TCD will auto power off and re-boot back to rr 01 repeat process until U C followed by . .
4. Call ARC	Call the ARC quoting TCD Serial No (on TCD & on label of box) The ARC will associate the TCD with the installation and activate it on IP/GPRS .	t 1	For added security there is a timeout period for ARC Activation.
5. Commission	Once associated & activated, press the Set button SW401 for 5 seconds.	t 1 0 1 C A 8, 8 8, 8	Segment displays t 1 01 then CA (Complete Activation) Finally, alternating decimal points on the segment display indicates TCD is commissioned successfully.
6. Test	Press and hold Set button SW401 for 5 seconds to send test alarms to the ARC on both paths.	No change	Call the ARC & check if test alarms on both paths are received and that the system is fully activated.
7. Set Panel & Dial Prefix	At this point the TCD can be configured to work with different panel types if necessary.		

TCD Quick Start Guide for GPRS/PSTN

Scan the QR Code for Emizon Downloads and Online Support



RS232/RS485 Data Ports
For serial interface to panel / Remote maintenance /UDL

PSTN Connection


T1

R1

LED Status Display
For step-by-step installation & diagnostics i.e. signal strength and connection path status

Power LED 101

TCD Serial Number
XX-XXXXXX-XX

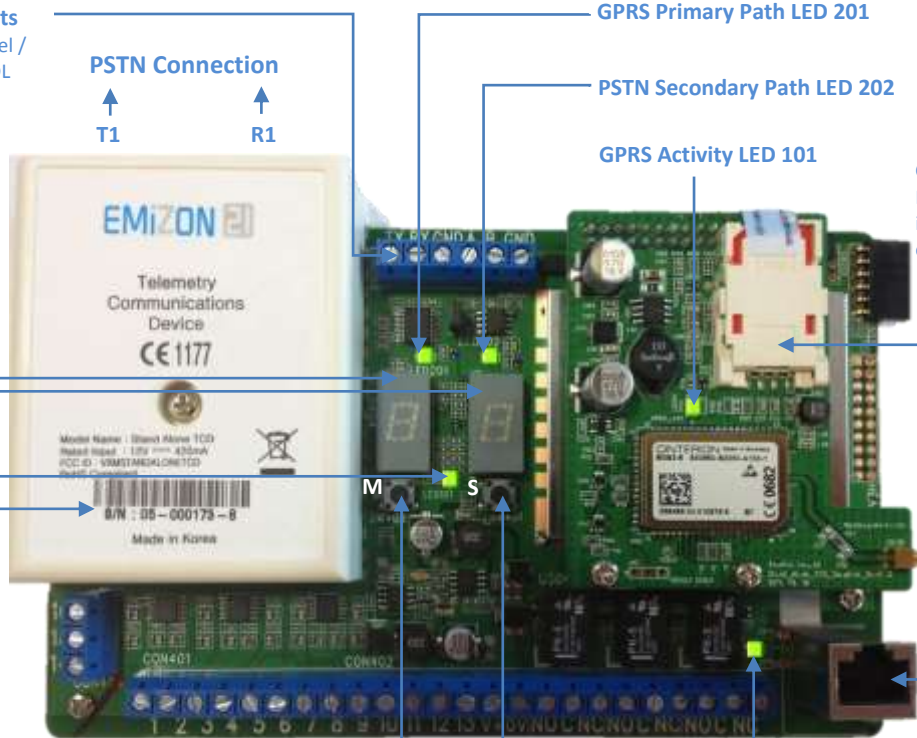

GPRS Primary Path LED 201

PSTN Secondary Path LED 202

GPRS Activity LED 101

Global Roaming SIM Card
Fitted and enabled for easy installation & maximum GPRS coverage

Connector for Standard or High Gain Antenna
For access to all GPRS networks

'One-Touch' Mode & Set Buttons

For Signal Strength Tap Mode button SW402 once.

Ethernet Activity LED 301

Only lit when upgraded Broadband IP

Ethernet Connector
To upgrade to broadband/IP when Networks available

NOTE: PUT THE TCD ON TEST WITH THE ARC BEFORE STEP 1

Step	Instruction	Display	Look out For
1. Fit TCD in Panel	Unscrew box and connect PSTN line T1 and R1 terminals - NO OTHER COMBINATION WILL WORK! Connect Antenna, Inputs, Relays and Power.		
2. Boot Up	Power-up the TCD and wait 30 seconds or until t1 appears on the segment display.	B U B C t 1	GPRS PCB LED 101 flashing changes from once a second to once every 3 seconds.
3. Call ARC	Call the ARC quoting TCD Serial No (on TCD & on label of box) The ARC will associate the TCD with the installation and activate it on GPRS/PSTN .	No Change	For added security there is a timeout period for ARC Activation.
4. Commission	Once associated & activated, press the Set button SW401 for 5 seconds. Be patient, this may take up to 15 minutes for both paths to make contact.	t 1 O 1 C A 8, 8, 8, 8,	Segment displays t1 01 then CA (Complete activation) Finally, alternating decimal points on the segment display indicates TCD is commissioned successfully.
5. Test	Press and hold set button SW401 for 5 seconds to send test alarms to the ARC on both paths.	No change	Call the ARC & check if test alarms on both paths are received and that the system is fully activated.
6. Set Panel & Dial Prefix	At this point the TCD can be configured to work with different panel types if necessary.		