

# DualCom Pro Panel Guide

## Pyronix Euro 46 V10

### Panel Connection – Serial (RS232)

Manufacturer	Pyronix
Model	Euro
Version	46
Minimum Panel Firmware	V10
Cable required?	Provided with DualCom Pro
Panel Profile	Pyronix-Euro-RS232
Panel Bus Connection	RS232
Technical Notes	N/A

### Cable Connection

#### Example of pin triggering wiring

MANUFACTURER	PANEL	CONNECTION	CABLE/PLUG ON	SUPPLIED CABLES
Pyronix	Euro/Enforcer	RS232	6 Pin (cable provided)	Green - RTN Blue - RS232-R Red - RS232-T

RS232



## Panel Programming

- Login to panel's Engineer Mode
- Go to and select COMMUNICATIONS? and then PROGRAM ARC/SMS?
- Select ARC DETAILS
- Set Format to WebWayOne [141]
- Set SIA Ack Char [006]
- Set SIA Nack Char [021]
- Valid Areas is Engineer's choice
- Area Accounts is Engineer's choice
- Set ARC Account to Site ID/Account No
- Set Redials [003]
- Set Time Out [30]
- Test Calls is Engineer's choice
- Event Types is Engineer's choice

## Remote Access Programming

- Go to 'Set Up Downloading'
- Set Download by (WebWayOne) [4]
- Set Poll Timeout [10]
- Set Modem Init Tmout [060]
- Set Rings to Answer [1]
- Set Comm Tx Timeout [030]
- Set Comm Dial Tmout [030]
- Set UDL Tx Timeout [02]
- Set Redials [03]
- Set Roving Dial to No [0]
- Set Auto Upload to No [0]
- UDL Password is Engineer's choice
- Site Name is Engineer's choice
- Go into Communications Menu and hit "NO "until Advanced Communications
- YES to enter, press YES until ARM PC Tel NO.
- Enter Connection ID / WebWay ID
- Press YES until Program PC 1 and enter Connection ID / WebWay ID again