

# DualCom Pro Panel Guide

## Pyronix Euro 280

### Panel Connection – Serial (RS232)

Manufacturer	Pyronix
Model	Euro
Version	280
Minimum Panel Firmware	V9.54d
Cable required?	Provided with DualCom Pro
Panel Profile	Pyronix-Euro-RS232
Panel Bus Connection	RS232
Technical Notes	N/A

### Cable Connection

#### Example of pin triggering wiring

MANUFACTURER	PANEL	CONNECTION	CABLE/PLUG ON	SUPPLIED CABLES
Pyronix	Euro/Enforcer	RS232	6 Pin (cable provided)	Green - RTN Blue - RS232-R Red - RS232-T

#### RS232



## Panel Programming

- Login to panel's Engineer Mode
- Go to and select PROGRAM ARC/SMS? and then Calls?
- Set ARC/SMS to Enabled' [0]
- Select ARC Details [1] and set Active to Yes [1]
- Set Format to WebWayOne [141]
- Set SIA Ack Char [006]
- Set SIA Nack Char [021]
- Valid Areas is Engineer's choice
- Area Accounts is Engineer's choice
- Set ARC Account to Site ID/Account No
- Set Content [1-32] Engineer's choice
- Set Redials [03]
- Set Time Out Seconds [30]
- Set Test Calls is Engineer's choice
- Exit Engineer Mode into Day Mode

## Remote Access Programming

- Go to 'Set Up Downloading'
- Select Download by (WebWayOne) [4]
- Select Poll Timeout [10]
- Select Modem Init Timeout [060]
- Select Rings to Answer [1]
- Select Comm Tx Timeout [030]
- Select Comm Dial Timeout [030]
- Select UDL Tx Timeout [02]
- Select ARMPC Tel No (Leave Blank)
- Select Program PCs [1]
- Modem Tel No (Leave Blank)
- Select Signal Alarms No [0]
- Select Signal Faults No [0]
- Select Signal Set/Unset No [0]
- Select Signal Access C. No [0]
- Select UDL Password (optional)
- Exit Engineering mode and save the configuration