

DualCom Pro Panel Guide

Pyronix Euro 280



CONNECTED • SECURE • LIVE

Panel Connection – Serial (RS232)

Manufacturer	Pyronix
Model	Euro
Version	280
Minimum Panel Firmware	V9.54d
Cable required?	“No Standard 3 wire cable can be used”
Panel Profile	Pyronix-Euro-RS232
Panel Bus Connection	RS232
Technical Notes	N/A

Panel Connection Information

RS232 T	FPRS232 Module - RXD
RS232 R	FPRS232 Module - TXD
RTN	FPRS232 Module - GND



Panel Programming

- Enter "Engineer Mode" > Select "Program ARC/SMS" > Select "Calls"
- Set "ARC/SMS" to "Enabled" [0] > Select "ARC Details" [1] and set "Active" to "Yes" [1] > Set "Format" to "WebWayOne" [141]
- Set "SIA Ack Char" [006] > Set "SIA Nack Char" [021] > "Valid Areas" is Engineer's choice > "Area Accounts" is Engineer's choice
- Set "ARC Account" to "Site ID/Account No" > Set "Content" [1-32] Engineer's choice
- Set "Redials" [03] > "Set Time Out Seconds" [30] > Set "Test Calls" Engineer's choice
- Exit "Engineer Mode" into "Day Mode"

Remote Access Programming

- Go to 'Set Up Downloading' > Select "Download" by (WebWayOne) [4]
- Select "Poll Timeout" [10] > Select "Modem Init Timeout" [060]
- Select "Rings to Answer" [1] > Select "Comm Tx Timeout" [030] > Select "Comm Dial Timeout" [030]
- Select "UDL Tx Timeout" [02] > Select "ARMPC Tel No" (Leave Blank)
- Select "Program PCs" [1] > "Modem Tel No" (Leave Blank)
- Select "Signal Alarms No" [0] > Select "Signal Faults No" [0] > Select "Signal Set/Unset No" [0]
- Select "Signal Access C. No" [0] > Select "UDL Password" (optional)
- Exit "Engineering Mode" and save the configuration