

DualCom Pro Panel Guide

DSC Maxsys



Panel Connection – Serial

Manufacturer	DSC
Model	Maxsys
SPT Firmware Version (Minimum)	4020
Panel Firmware (Minimum)	RS232
Cable required?	Yes – CS.1.207
MCM, Serial or Peripheral	Serial
Panel Profile	DSCRS232
Panel Bus Connection	RS232
Technical Notes	Please see below

Panel Connection Information

MANUFACTURER	PANEL	CONNECTION	CABLE/PLUG ON	SUPPLIED CABLES
DSC	Maxsys	RS232	4 Pin Cable Required: (CS.1.207)	Green – RTN Blue – RS232 – R Red – RS232-T

Panel Programming

- Engineer login and set-up: 1. Press *8
- Keypad displays 'Enter Your Installer Code'
- Press 5555
- Scroll to (00) System Area and press *
- Scroll to (03) DLS Section and press *
- Scroll to (00) DLS Toggles and press *
- Set DLS Enabled = Y
- Press # twice
- Scroll to (04) Communicator and press *
- Scroll to (00) Main Items and press *
- Scroll to (00) 1st Number and press *
- Scroll to (00) Pgm Tel Number and press *
- Set to CAAA and remove 'D' from the beginning
- Scroll to (01) Comms Format and press *
- Set to SIA Fsk Format
- Scroll to (02) Dialer Direction and press *
- Toggle events to be sent.
- Press # twice.
- Scroll to (03) System Account and press *
- Set Account Code, normally same Site ID as SPT
- Press # until you are back to step 9) and clear 2nd and 3rd telephone number, then step 22)
- Scroll to (01) Communications options (CommsToggles) and press *
- Set Communicator Enabled = Y
- Set TLM Enabled = N
- Set Automatic SIA codes (AutoReport SIA) = Y
- Set TLink Enabled = Y