

# DualCom Pro Panel Guide

## Pyronix Euro 46 V10

### Panel Connection – Serial (RS232)

Manufacturer	Pyronix
Model	Euro
Version	46
Minimum Panel Firmware	V10
Cable required?	Provided with DualCom Pro
Panel Profile	Pyronix-Euro-RS232
Panel Bus Connection	RS232
Technical Notes	N/A

### Panel Connection Information

MANUFACTURER	PANEL	CONNECTION	CABLE/PLUG ON	SUPPLIED CABLES
Pyronix	Euro/Enforcer	RS232	6 Pin (cable provided)	Green - RTN Blue - RS232-R Red - RS232-T

#### RS232



## Panel Programming

- Enter "Engineer Mode" > Select "Communications" > "Program ARC/SMS"
- Select "ARC Details" > Set "Format" to WebWayOne [141] > Set "SIA Ack Char" [006] > Set "SIA Nack Char" [021]
- "Valid Areas" is Engineer's choice > "Area Accounts" is Engineer's choice
- Set "ARC Account" to "Site ID/Account No" > Set "Redials" [003] > Set "Time Out" [30]
- "Test Calls" is Engineer's choice > "Event Types" is Engineer's choice

## Remote Access Programming

- Go to 'Set Up Downloading' > "Set Download" by (WebWayOne) [4]
- Set "Poll Timeout" [10] > Set "Modem Init Timeout" [060]
- Set "Rings to Answer" [1] > Set "Comm Tx Timeout" [030] > Set "Comm Dial Tmout" [030]
- Set "UDL Tx Timeout" [02] > Set "Redials" [03] > Set "Roving Dial" to No [0] > Set "Auto Upload" to "No" [0]
- "UDL Password" is Engineer's choice > "Site Name" is Engineer's choice
- Go into "Communications Menu" and select "No" until "Advanced Communications" > press "Yes" until "ARM PC Tel NO."
- Enter 1111
- Press YES until Program PC 1 and enter 1111 again