

DualCom Pro Visonic PowerMaster

Panel Connection – MCM

Manufacturer	Visonic
Model	PowerMaster
Version	Below
Minimum Panel Firmware	MCM version less or equal to V1.05 - Needs SPT version less or equal to V2.06 MCM version greater or equal to V1.06 - Needs SPT version greater or equal to V2.07
Cable required?	Standard alarm cable
Panel Profile	VISONIC-PMAX/MASTER-MCM
Panel Bus Connection	MCM
Technical Notes	Reporting of Pro path states to the panel is not supported via the serial interface. [Please use the Pro Outputs] ** UPDATE ** UK Panel Firmware V3.3.3 (UK only) - All tested and working fine on SIA & UDL via the DualCom Pro

Panel Connection Information

SPT	PANEL
MCM plug-on module - Line a	RJ11 Pin 3
MCM plug-on module - Line b	RJ11 Pin 4



Visonic Panel Connection RJ11

Panel Programming

- Enable "Installer Access" - *Default user code = 1111* > Press the "Unlock Icon" button > Enter "User Code"
- Enter "Engineer Mode" > Press "OK" > Enter "Installer Code"
- Enter "Communications Menu" > Press "OK"
- Navigate to "C.S. Reporting" > Press "OK" > At "1st RPRT CHAN" > Press "OK" > Select "PSTN" > Press "OK"
- Under "2nd RPRT CHAN" > Press "OK" > Select "Disabled" > Press "OK"
- Navigate to "RCVR1 Account" > Press "OK" > Enter "Account Number" (chip number) > Press "OK"
- Go to "PSTN/GSM RCV1" > Press "OK" > Insert a "Telephone Number" (example: 01234567890) > Press "OK"
- Navigate to "PSTN Format" > Press "OK" > Select "SIA" > Press "OK" > Press "ESC"
- Navigate to "Up/Download" > Press "OK" > Navigate to "PSTN Up/Download" > Press "OK"
- Enable "Remote Access"
- Press "ESC" button to make the changes take effect