



CONNECTED • SECURE • LIVE


RM8 MODULE

PRODUCT DESCRIPTION

Product Code: CS.1.235

The RM8 Relay Module is compatible with any control panel that has a plug on DualCom footprint.

RELAY MODULE PCB LAYOUT

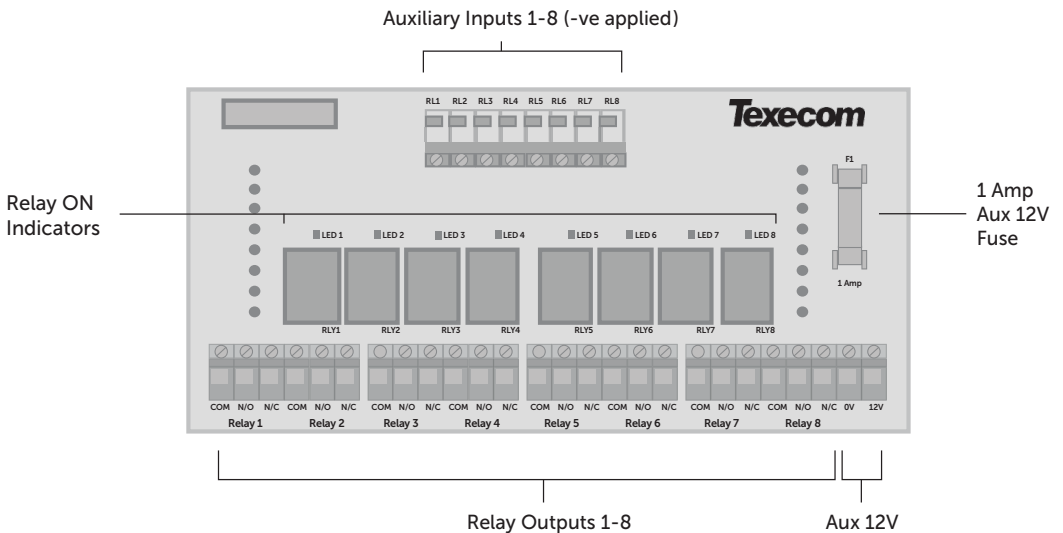


INSTALLATION

Before attempting to install the RM8 Relay Module, isolate ALL power from the control panel. Do not continue if there is power still present on the control panel as plugging on the RM8 Relay Module with power still present on the control panel may damage the Relay Module, control panel or both.

1. Ensure that the Relay Module is the correct way up (see diagram)
2. Press down on the Relay Module until it is fitted correctly
3. Reconnect power to the control panel

CONNECTING OUTPUT

The RM8 Relay Module has 8 outputs. These outputs can be used to drive auxiliary devices. Each output is a clean contact (relay rates at 3A & 12V). The diagram below shows typical wiring examples for the outputs:

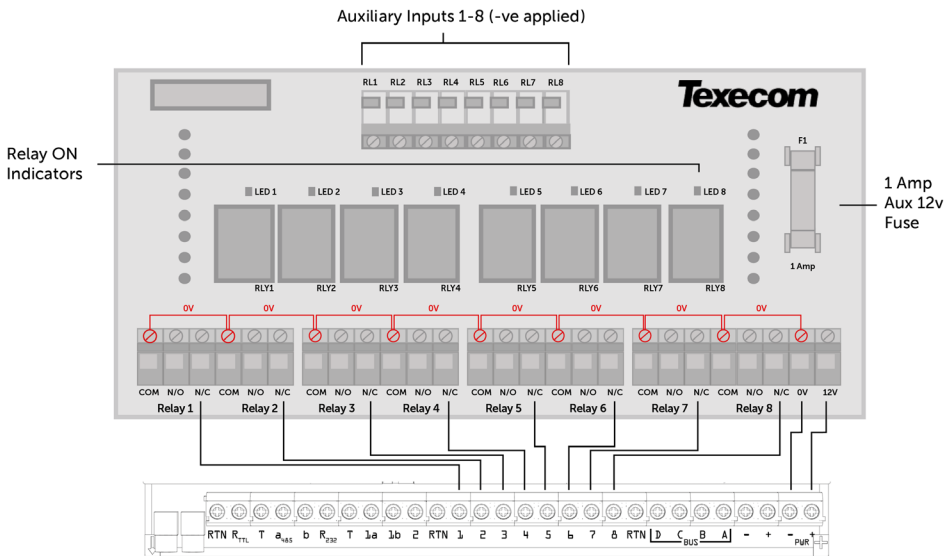

For more information on DualCom Pro and other products please contact CSL Technical Support:

UK Tel: +44 (0)1895 474 444

Ireland Tel: 1800 855 695

Netherlands Tel: +31 (0) 8847 477 77

Spain Tel: 961 36 88 88

Email: support@csl-group.com

Hours: 08.30 to 18.00 weekdays, 10.00 to 16.00 Saturday

Visit www.csl-group.com for the latest copies of all manuals