












DIGIAIR PRO 3 - LEDS COLOUR STATUS GUIDE

GUIDE





DigiAir Pro 3 - LEDs Colour Status Guide

Guide

As the DigiAir Pro 3 powers up for the very first time it will run through its commissioning process. You will need to wait for LEDs 1, 2 & 3 to go green before the unit reboots.





LED 1		LED 2		LED 3	
	No light = No power		Red flashing = No comms		Red flashing = No comms
	Amber flashing = Power start-up		Amber flashing = Single path comms (dual path systems)		Amber flashing = Comms path found
	Green flashing = Power on				Amber solid = Commissioning server found. Contacting alarm server
					Green Solid = Fully Commissioned

Once commissioned, the unit will return to its quiescent/normal state. LED 3 should be visible and LEDs 1 & 2 will be off. LED 3 will show you whether the unit has any errors or is transmitting data.

LED 3	
	Red: Internal error (not commissioned or configuration error) - please contact Tech Support
	Flashing Amber: Communication error - please press Button A for more details
	Green: Device is operating normally
	Flashing Green: Device is operating normally and transmitting or receiving data

From the quiescent/normal state, press button A. Only LED 1 will show.

LED 1

	Red flashing = No signal / SIM not ready or LAN not connected
	Amber flashing = Registering / Signal is unacceptable / LAN connected but cannot transmit data
	Green flashing = Signal is acceptable (3/10) but could be improved
	Green solid = Signal 4/10 (or above) or LAN connected