



# SIGNAL ANALYSER FIRMWARE UPGRADE INSTRUCTIONS

# Signal Analyser Firmware Upgrade Instructions

## Upgrade Procedure

### Step 1


Contact your distributor/place of purchase to receive the DfuSe Demo Software required.

### Step 2

With your Signal Analyser powered off, press and hold the 'quick survey' button whilst inserting your USB cable into the Signal Analyser and into your PC/Laptop. Once both are connected, release the button. The green LED will flash repeatedly to confirm you are in upgrade mode.

### Step 3

Open the DfuSe Demo Software and follow the points below.

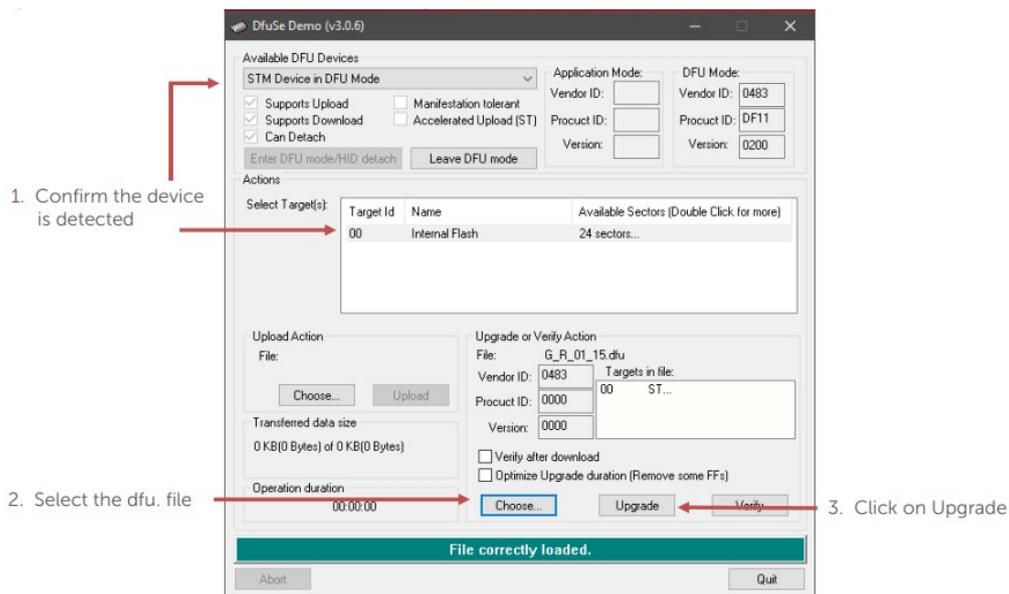

### Step 4

Accept any pop-up messages from the DfuSe software to proceed with the upgrade. Once loaded the software will show that the firmware upgrade has been successful/unsuccessful via the green progress bar.

### Step 5

Unplug the USB cable and restart the Signal Analyser. On start up the Signal

Analyser will display the firmware version (ie G\_1\_15).

## Step 6

It is recommended to format the Signal Analyser once a firmware update has been completed. On your PC/laptop enter the [Computer] menu, locate the Signal Analyser, right click and select format. Click start to format the drive (see image on next page).

